



Capri
Pelle / Leather / Leder / Cuir Souple

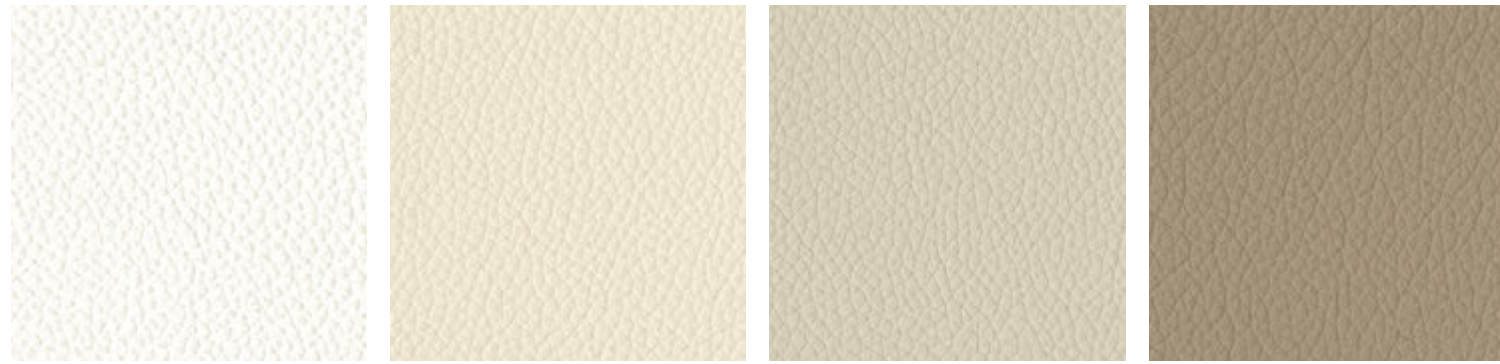

L01 L26 L02 L03




L45 L30 L37 L46

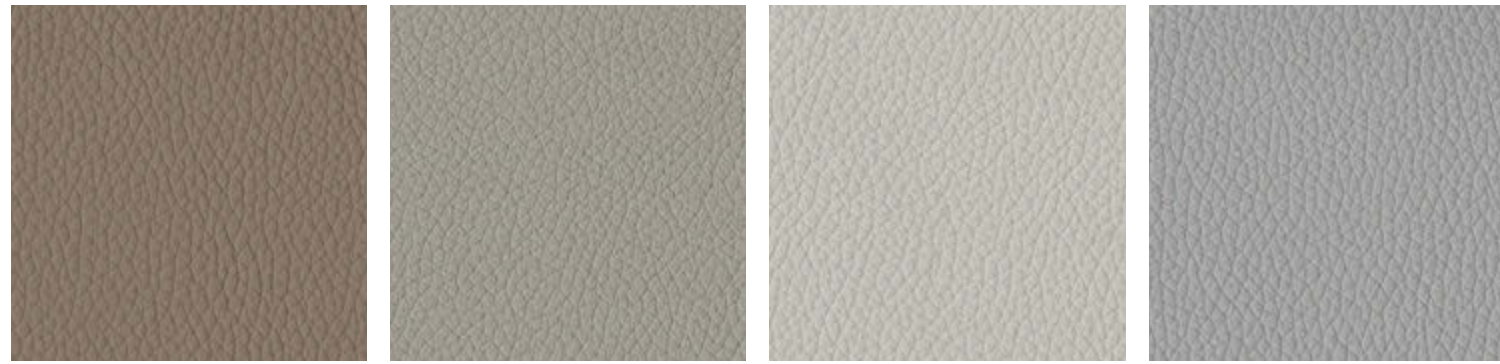

L34 L39 L41 L10



L47 L48 L49 L06

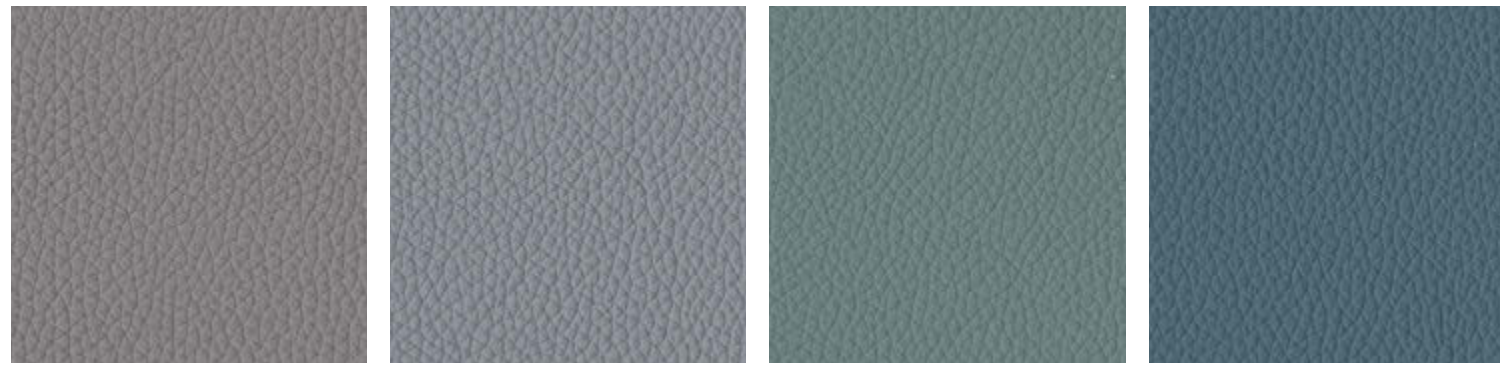

L27 L40 L42 L28



L05 L12 L35 L04




L07 L43 L38 L44



L50 L51 L08 L09

Ecopelle / Eco-Leather / Kunstleder / Éco-cuir

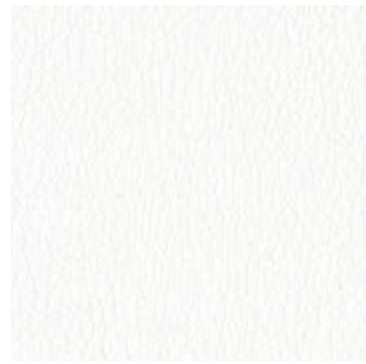

330



342



343



368




359



344



340

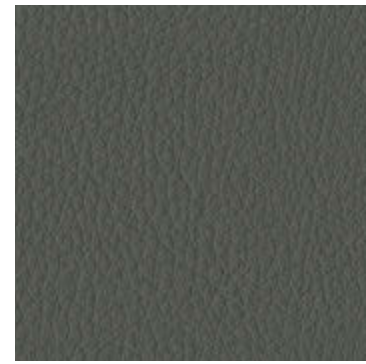

356



354



369



358



346



332



371



372



373



370



353



341

Ecopelle Vintage / Vintage Eco-Leather / Vintage Kunstleder /
Éco-Cuir Vintage



200



201




202



203



204

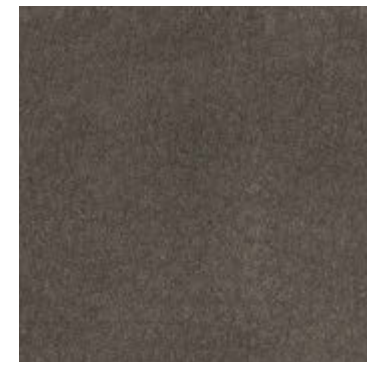

205



206



207